




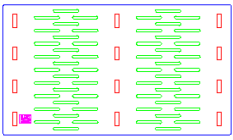






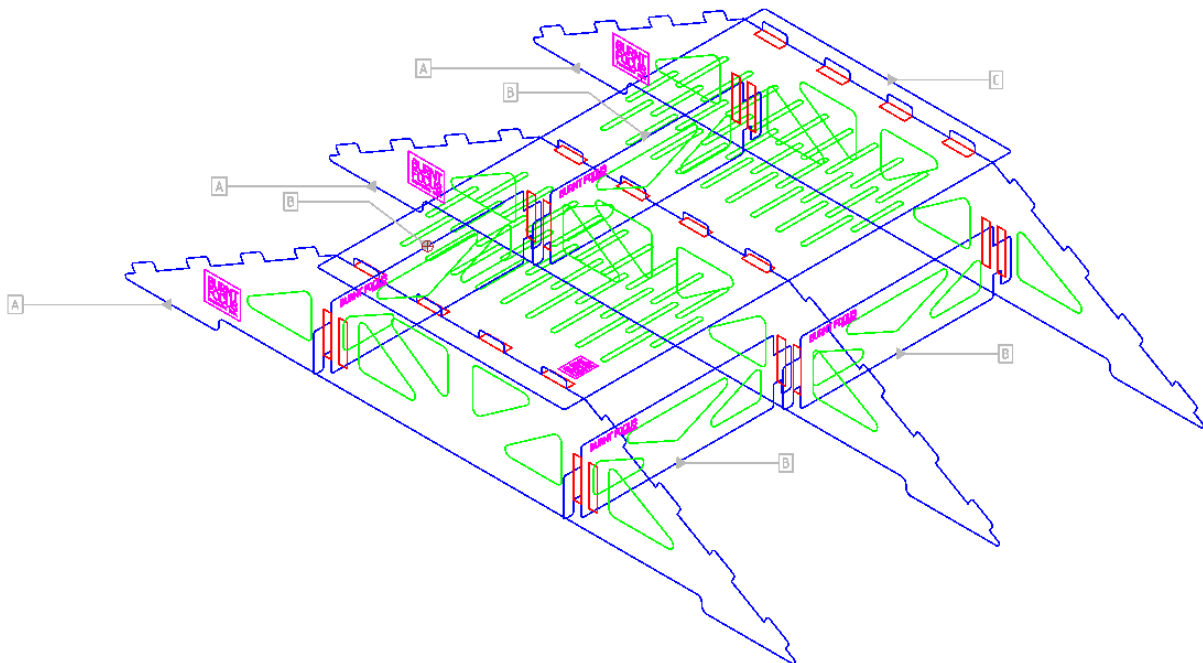


Assembly Instructions - S3 Arc Bridge Sample Kit

1. Build the middle structure (A through B).
 - a. Ensure part B is not cross linked, and is in the same slot on both sides.
 - b. Middle Truss A is not used with full width cross support (not included)
2. Attach Bridge Decking
 - a. SS Half Decking is designed to alternate with the narrow side on the middle truss.
 - b. SX Decking makes a great first piece when using SS or SX Decking



- A. Side piece - S3 Arc Bridge Truss
B. Cross support - H1 Half Brace
C. Bridge Deck - S1 Full Decking

Parts List

SKU	Image	Name
GMG00044-1		S3 Arc Bridge Truss
GMG00056-1		H1 Half Brace
GMG00049-1		S1 Full Decking
GMG00050-1		S1 Half Decking
GMG00051-1		SS Full Decking
GMG00052-1		SS Half Decking
GMG00053-1		SX Full Decking
GMG00054-1		SX Half Decking
GMG00055-1		H1 Full Brace
GMG00056-1		H1 Half Brace
GMG00055-2		H2 Full Brace
GMG00056-2		H2 Half Brace
GMG00055-3		S1 Brace
GMG00056-3		S2 Brace